

Firmware upgrade from 7.8 to 7.9:

A. Using Web interface:

Install base version of 7.9.0.0 firmware

1. Copy or download the premierwave_xc_hspa_7_9_0_ORXX.rom to a host computer.
2. Using an internet browser Navigate to: http:<IP Address>

<IP address>: IP address of the PremierWave XC HSPA+ device

Default login credentials: admin, PASS

3. Click on System tab on the left.
4. Click on Upload New Firmware and choose 'premierwave_xc_hspa_7_9_0_ORXX.rom' (saved in step 1).
5. Click Upload.

The device will automatically reboot after firmware has been updated.

Install Python (optional):

1. Copy or download the 'premierwave_xc_hspa_7_9_0_ORXX_python.rom' or 'premierwave_xc_hspa_7_9_0_ORXX+python.rom' to a host computer.
2. Using an internet browser Navigate to: http:<IP Address>

<IP address>: IP address of the PremierWave XC HSPA+ device

Default login credentials: admin, PASS

3. Click on System tab on the left.
4. Click on Upload New Firmware and choose 'premierwave_xc_hspa_7_9_0_ORXX_python.rom' or 'premierwave_xc_hspa_7_9_0_ORXX+python.rom' (saved in step 1).
5. Click Upload.

The device will automatically reboot after firmware has been updated.

B. Using FTP

Install base version of 7.9.0.0 firmware

1. Copy or download the premierwave_xc_hspa_7_9_0_ORXX.rom to a host computer.
2. ftp <IP Address>

<IP address>: IP address of the PremierWave XC HSPA+ device

Default login credentials: admin, PASS

3. put premierwave_xc_hspa_7_9_0_ORXX.rom firmware.rom

The device will automatically reboot after firmware has been updated.

Install Python (optional):

1. Copy or download the 'premierwave_xc_hspa_7_9_0_ORXX_python.rom' or 'premierwave_xc_hspa_7_9_0_ORXX+python.rom' to a host computer.
2. ftp <IP Address>
<IP address>: IP address of the PremierWave XC HSPA+ device
Default login credentials: admin, PASS
3. put premierwave_xc_hspa_7_9_0_ORXX_python.rom firmware.rom

or,

put premierwave_xc_hspa_7_9_0_ORXX+python.rom firmware.rom

The device will automatically reboot after firmware has been updated.

C. Using Lantronix Device Installer

To use the DeviceInstaller utility, first install the latest version of the DeviceInstaller from the downloads page on the

Lantronix web site www.lantronix.com/downloads.

Install base version of 7.9.0.0 firmware

1. Run the executable to start the installation process and follow the installation wizard prompts. (If prompted to select an installation type, select Typical.)
2. Click Start -> All Programs -> Lantronix -> DeviceInstaller 4.4 -> DeviceInstaller.
3. Click Tools -> Recover Firmware
4. Select Port on PC, Device Model (Premierwave XC HSPA+ P6),
'premierwave_xc_hspa_7_9_0_ORXX.rom' as Firmware File, and click OK.

Follow on screen instructions to complete the serial recovery and device reboot.

Install Python (optional):

Use Web interface or FTP method described above to install Python.