

Lantronix PremierWave EN

Instructions for software update from version 7.9.0.0 to version 8.0.0.0

Firmware upgrade from 7.9 to 8.0:

This document describes the procedure to upgrade PremierWave EN from firmware version 7.9 to 8.0

1. Take the backup of existing device configuration (with export secrets options selected). This can be done via the Web Manger or by using the CLI. Please refer to the user guide for detailed steps.
2. Following upgrades can be performed using firmware upgrade mechanisms documented in the user guide.
 - a. Upgrade to interim firmware using the rom file
premierwave_en_interim_upgrader_8_0_0_0B1.rom *OR*
premierwave_en_interim_upgrader_8_0_0_0B1+python.rom if using a firmware with python support.
 - b. Upgrade to target firmware version 8.0 using the applicable rom file
premierwave_en_8_0_0_0R12.rom *OR* **premierwave_en_8_0_0_0R12+python.rom** if using a firmware with python support.