

### **A. Install Python (using FTP):**

1. If current version of firmware on the PremierWave XN is not 8.0, use the Firmware upgrade procedure mentioned below in section C and then proceed to step 2
2. Copy or download the 'premierwave\_xn\_8\_0\_0\_ORXX\_python.rom'
3. ftp <IP Address>  
<IP address>: IP address of the PremierWave XN device  
Default login credentials: admin, PASS
4. put premierwave\_xn\_8\_0\_0\_ORXX\_python.rom - firmware.rom

The device will automatically reboot after firmware has been updated.

### **B. Install Python (using web manager):**

1. If current version of firmware on the PremierWave XN is not 8.0, use the Firmware upgrade procedure mentioned below in section C and then proceed to step 2
2. Copy or download the 'premierwave\_xn\_8\_0\_0\_ORXX\_python.rom' or 'premierwave\_xn\_8\_0\_0\_ORXX+python.rom' to a host computer.
3. Using an internet browser Navigate to: http:<IP Address>

<IP address>: IP address of the PremierWave XN device

Default login credentials: admin, PASS

4. Click on System tab on the left.
5. Click on Upload New Firmware and choose 'premierwave\_xn\_8\_0\_0\_ORXX\_python.rom'

or

'premierwave\_xn\_8\_0\_0\_ORXX+python.rom' (saved in step 1).

6. Click Upload.

The device will automatically reboot after firmware has been updated.

### **Firmware upgrade from 7.3 to 8.0:**

#### **C. Using Lantronix Device Installer**

To use the DeviceInstaller utility, first install the latest version of the DeviceInstaller from the downloads page on the Lantronix web site [www.lantronix.com/downloads](http://www.lantronix.com/downloads).