SGX5150 OTA Loader Upgrade Procedure

- 1. Log into the SGX5150 web manager and go to the Administration tab
- 2. Click on the "Reboot to Standalone Firmware Installer" button

<b>GCX</b> 5150					P Help Logot
Status	Ne	twork	Filesystem	Diagnostics	Administration
ine	>				5
SB	» R	Restore Factory D	Defaults		
lodbus	>	Factory Defaults			
MTP	1	Inload New Firm	ware		
NMP		Browse No file selected.	Ware		
зн	>	Upload			
SL	>				
yslog	s	tandalone Firmw	vare Installer		
ystem		Reboot to Standalone Firmware	Installer		
erminal	>				
unnel	> N	lame			

3. The unit will reboot and reconnect you to the following screen

noose ROM	I file to upgrade		
Browse	No file selected.		
Upgrade			

- 4. Click on the Browse button
- 5. Find and select the at9g252\_configldr\_1.0.0.0R6.rom
- 6. Click on the Upgrade button
- 7. Once the upgrade completes, the unit should reboot to its regular firmware
- You can then proceed with the upgrade of the firmware to v8.0.0.0R52 using the Upload New Firmware instructions on page 110 of the User Guide: <u>https://www.lantronix.com/wpcontent/uploads/pdf/SGX5150\_UG.pdf</u>